

Partnumber	Description	
132101	Oven	Email rfq@tam.se to get a quote
321935	HP Bleed Air Shutoff Valve	Email rfq@tam.se to get a quote
321945	Cross-over Bleed Air Valve	Email rfq@tam.se to get a quote
522396	Hydraulic fluid Quantity Indicator	Email rfq@tam.se to get a quote
522783	Indicator, Cabin Alt/Diff Press.	Email rfq@tam.se to get a quote
522792	Propeller Speed Indicator	Email rfq@tam.se to get a quote
522794	Engine Oil Pressure/Temp Indicator	Email rfq@tam.se to get a quote
522795	Oil Press/Temp Indicator (Prop)	Email rfq@tam.se to get a quote
522797	Brake Pressure Indicator	Email rfq@tam.se to get a quote
522809	Batt/Fuel Temp Indicator	Email rfq@tam.se to get a quote
522834	Trim Position Indicator	Email rfq@tam.se to get a quote
522858	Dual Flap Position Indicator	Email rfq@tam.se to get a quote
522861	ITT Indicator	Email rfq@tam.se to get a quote
522948	Torque Indicator	Email rfq@tam.se to get a quote
523048	Gas Generator Speed Indicator	Email rfq@tam.se to get a quote
523250	Hydraulic Pressure Indicator (Dual)	Email rfq@tam.se to get a quote
523347	ITT Indicator	Email rfq@tam.se to get a quote
523401	Torque Indicator	Email rfq@tam.se to get a quote
523402	ITT Indicator	Email rfq@tam.se to get a quote
523535	Oil Press/Temp Indicator (Prop)	Email rfq@tam.se to get a quote
5006488	Wheel Subassy, Outbd	Email rfq@tam.se to get a quote
638005001	Pump, Feathering	Email rfq@tam.se to get a quote
660713245	Propeller De-ice Timer Control	Email rfq@tam.se to get a quote
661001002	Governor, Propeller Overspeed	Email rfq@tam.se to get a quote
663006009	Propeller Pitch Control Governor	Email rfq@tam.se to get a quote
0020AK4	Stall Computer Warning Ident/Comp	Email rfq@tam.se to get a quote
005WS00	Warning Electronic Unit	Email rfq@tam.se to get a quote
005WS00	Warning Electronic Unit (WEU)	Email rfq@tam.se to get a quote
010208	Fan Ventilation Battery Comp	Email rfq@tam.se to get a quote
0108900-53	Restraint System	Email rfq@tam.se to get a quote
0108900-55	Belt (Pilot)	Email rfq@tam.se to get a quote
0108900-55	Restraint System (Pilot)	Email rfq@tam.se to get a quote
019422-000	Temp. sensor	Email rfq@tam.se to get a quote
027-630-0	Nose Wheel Tyre (Michelin)	Email rfq@tam.se to get a quote
027-711-0	Main Wheel Tyre (Michelin)	Email rfq@tam.se to get a quote
028-327-0	Nose Tyre (Michelin)	Email rfq@tam.se to get a quote
028-675-3	Main Tyre (Michelin)	Email rfq@tam.se to get a quote
028-675-3R	Main Tyre (Michelin)	Email rfq@tam.se to get a quote
028-675-6R	Main Tyre (Michelin)	Email rfq@tam.se to get a quote
04-1504-5428	Anti-Collision Light Power Supply	Email rfq@tam.se to get a quote
04-1505-3528	Anti Collision Power Supply	Email rfq@tam.se to get a quote
04-1505-3528	Power Supply	Email rfq@tam.se to get a quote
052-10023-15	Satellite Phone Connector	Email rfq@tam.se to get a quote
064-1020-01	VHF COMM Transceiver	Email rfq@tam.se to get a quote

51539-007B	DC Generator Control Unit	Email rfq@tam.se to get a quote
51539-007B	DC Generator Control Unit (GCU)	Email rfq@tam.se to get a quote
51634-002	Generator Control Unit -REP EJ Aerospace dynamics!	Email rfq@tam.se to get a quote
51634-002	AC Generator Control Unit (GCU)	Email rfq@tam.se to get a quote
51653-118	Overheat Detector Control Unit	Email rfq@tam.se to get a quote
51653-118	Control Unit, Bleed Air Detection	Email rfq@tam.se to get a quote
520-3337-117	Radio Magnet Indicator	Email rfq@tam.se to get a quote
522387	Cabin Temp Indicator	Email rfq@tam.se to get a quote
522396	Fluid Quantity Indicator	Email rfq@tam.se to get a quote
522781	Total Fuel Used Ind (LBS)	Email rfq@tam.se to get a quote
522781	Total Fuel Used Ind.	Email rfq@tam.se to get a quote
522783	Cabin Press Indicator	Email rfq@tam.se to get a quote
522792	Propeller Speed Indicator	Email rfq@tam.se to get a quote
522793	Gas Generator Speed Indicator	Email rfq@tam.se to get a quote
522793	Engine Speed Indicator	Email rfq@tam.se to get a quote
522794	Engine Oil Press/Temp Indicator	Email rfq@tam.se to get a quote
522794	Engine Oil Pressure/Temp Indicator	Email rfq@tam.se to get a quote
522795	Prop Oil/Temp Ind	Email rfq@tam.se to get a quote
522797	Hydraulic Brake Pressure Indicator	Email rfq@tam.se to get a quote
522798	Dual Flap Position Indicator	Email rfq@tam.se to get a quote
522809	Batt/Fuel Temp Indicator	Email rfq@tam.se to get a quote
522814	Total Fuel Used Ind (KG)	Email rfq@tam.se to get a quote
522834	Trim Position Indicator	Email rfq@tam.se to get a quote
522858	Flap Position Indicator	Email rfq@tam.se to get a quote
522858	Dual Flap Position Indicator	Email rfq@tam.se to get a quote
522861	Interturbine Temp Indicator (ITT IND)	Email rfq@tam.se to get a quote
522948	Engine Torque Indicator	Email rfq@tam.se to get a quote
523048	Gas Generator Speed Indicator.	Email rfq@tam.se to get a quote
523250	Hydraulic Pressure Indicator	Email rfq@tam.se to get a quote
523347	Interturbine Temp Indicator (ITT IND)	Email rfq@tam.se to get a quote
523402	ITT Indicator	Email rfq@tam.se to get a quote
523535	Propeller Oil/Temp Indicator	Email rfq@tam.se to get a quote
523535	Oil Press/Temp Indicator (Prop)	Email rfq@tam.se to get a quote
53082-12	Control Quadrant	Email rfq@tam.se to get a quote
53082-16	Control Quadrant	Email rfq@tam.se to get a quote
53162-2	Control Quadrant	Email rfq@tam.se to get a quote
53170-4	Quadrant, Engine Control	Email rfq@tam.se to get a quote
5500C1A-Y0EE	Portable Oxygen Bottle (Large)	Email rfq@tam.se to get a quote
55-0521-4-5	Inverter	Email rfq@tam.se to get a quote
55-0531-6-5	Glareshield Light Inverter	Email rfq@tam.se to get a quote
56B3A10	Temperature Transmitter	Email rfq@tam.se to get a quote
57024929013	Altimeter	Email rfq@tam.se to get a quote
57-4AW	Twin Tachometer	Email rfq@tam.se to get a quote
5934PAM1-1A.71	Altimeter	Email rfq@tam.se to get a quote
60-1321-1	Emergency Light Power Supply	Email rfq@tam.se to get a quote
60-1321-1	Power Supply, Emergency Light (ELPS)	Email rfq@tam.se to get a quote

